



Computer Basics

FRONT PANEL

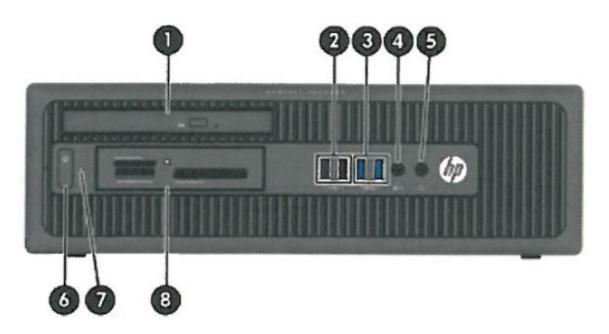

1	Optical Disk Drive – (CD ROM or DVD ROM Drive
2	USB 2.0 ports (black)
3	USB 3.0 ports (blue) Faster Transfer Speed. Backwards compatible
4	Microphone/Headphone connector
5	Headphone connector
6	Power Button
7	Hard drive activity light
8	3.5-inch media card reader

BACK PANEL

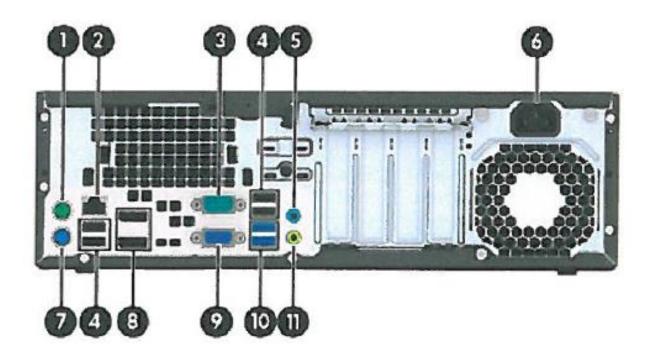

PS/2 ports-Mouse Connector (green)
Network Connector—Ethernet Port-connects cable to router or modem.
Serial Connector – connects to printers
USB 2.0 Ports (black)—connect printers, keyboard, speakers
Line-in Audio Connector (blue)—external audio devices (microphones)
Power socket—connect power cord
PS/2 ports-Keyboard connector (purple)
HDMI Monitor port connector
Monitor Port (blue VGA)
USB 3.0 ports (blue)—connect printers, keyboard, speakers
Line-out connector for audio (green)—speakers, headphones

HP ProDesk 600 G1 Small Form Factor PC - Identifying Components | HP® Customer Support. Retrieved April 04, 2017, from https://support.hp.com/us-en/document/c03846662